






# DMS Series Sensor

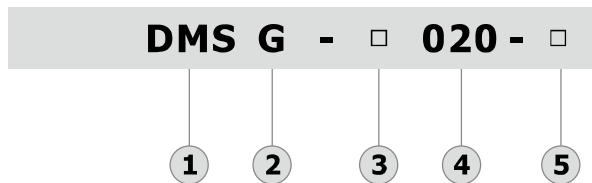

## Ordering code for DMS

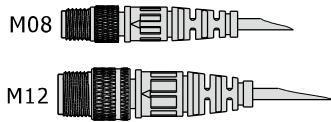

① <b>Model</b>	DMS: Solid State Sensor			
② <b>Specifications</b>	G	H	E	J
③ <b>Output type</b>	Blank: 2 wire		N : NPN	P : PNP
④ <b>Lead wire</b>	<b>Direct lead wire</b>	020: 2m	030: 3m	050: 5m    100: 10m
	<b>Plug connector</b>	M08:0.5m with M8 plug connector M08010:1m with M8 plug connector M08020:2m with M8 plug connector M08030:3m with M8 plug connector	M12:0.5m with M12 plug connector M12010:1m with M12 plug connector M12020:2m with M12 plug connector M12030:3m with M12 plug connector	
⑤ <b>Additional specification</b>	Blank: General type	RW:Waterproof, oil and flexure-resistant type IP68 [note1]		

[Note1] Waterproof, oil and flexure-resistant type is not available for all series M08, M12 plug connector.  
Add:The sockets of M08 and M12 need additional order. Please check on page 537.

## DMS Specifications

Item	DMS		
	2-wire	NPN	PNP
Model			
Power supply voltage	10V ~ 28V DC	5V ~ 30V DC	
Switching current	2.5mA ~ 100mA	30V/200mA Max.	
Contact capacity	2.8W Max.	6.0W Max.	
Current consumption	3mA Max.	5mA Max.	
Internal voltage drop	3.5V Max.	0.7V Max.	
Leakage current	0.05mA Max.	0.01mA Max.	
Switching frequency	1000Hz		
Impact resistance	30G		
Circuit protection	Reverse polarity protection Surge protection		
Operating Temp.	-10°C ~ 70°C		
Enclosure	General type : IP64 / Waterproof, oil and flexure-resistant type IP68		
Standard	CE marking, RoHS		





## Compendium of DMS Series

### Two types of sensors

#### General type(DMS)

General type(Aqua Blue)



#### Waterproof, oil and flexure-resistant type(DMS-RW)

Product characteristics:


1. Flexure resistant curve material can be used in manipulator industry, such as multi joint manipulator and tank chain.
2. In case of welding slag, corresponding protective measures shall be taken for the sensor.

#### Oil resistant and flexural curve material


The deflection is increased by about 20% compared with the general type. It can be used in oil dust environment.



#### Waterproof design(IP68)

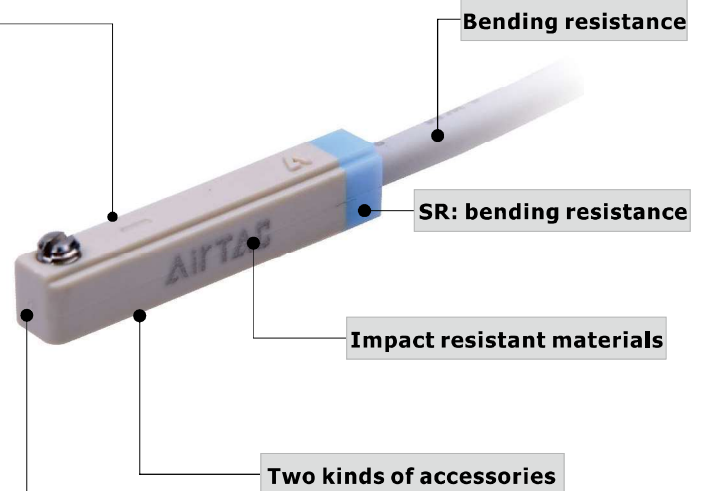

DMSG can be mounted with 2 accessories, applicable to multi-cylinders.

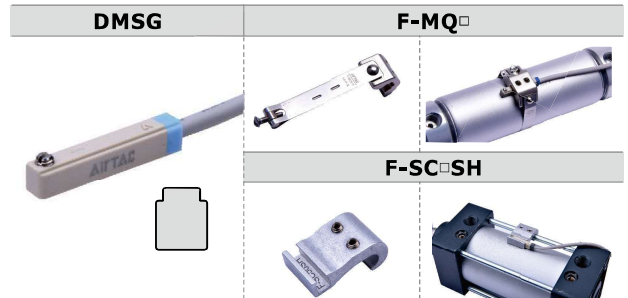

Note: The recommended minimum bending radius of DMS-RW cables is 19mm.


### Four types of cross section

<b>G Type</b> 	
<b>H Type</b> 	
<b>E Type</b> 	
<b>J Type</b> 	






## Ordering code for CMS



**CMS G - 020 - □**



① ② ③ ④

② Model		CMS: Reed Sensor			
③ Specifications		G	H	E	J
④ Lead wire	Direct lead wire	020: 2m	030: 3m	050: 5m	100: 10m
	Plug connector	M08:0.5m with M8 plug connector M08010:1m with M8 plug connector M08020:2m with M8 plug connector M08030:3m with M8 plug connector	M12:0.5m with M12 plug connector M12010:1m with M12 plug connector M12020:2m with M12 plug connector M12030:3m with M12 plug connector		
⑤ Additional specification		Blank: General type		H:Heat resistant [note1]	

[Note1]M08 and M12 has no heat resistant option.

Add:The sockets of M08 and M12 need additional order. Please check on page 537.

## CMS Specifications

Item	CMS	
	General	Heat resistant
Model	General	Heat resistant
Power supply voltage	5V ~ 240V AC/DC	
Switching current	100mA	
Contact capacity	10W Max.	
Current consumption	N/A	
Internal voltage drop	2.5V Max. @100mA DC	N/A
Leakage current	N/A	
Switching frequency	200Hz	
Impact resistance	30G	
Circuit protection	N/A	
Operating Temp.	-10°C ~ 70°C	-10°C ~ 125°C
Enclosure	IP64	
Standard	CE marking, RoHS	





## Compendium of CMS Series

### Type of sensors

#### General type(CMS)

General type(blue)



High temperature type (red)




Bending resistance

SR: bending resistance

Impact resistant materials

Two kinds of accessories

CMSG can be mounted with 2 accessories, applicable to multi-cylinders.

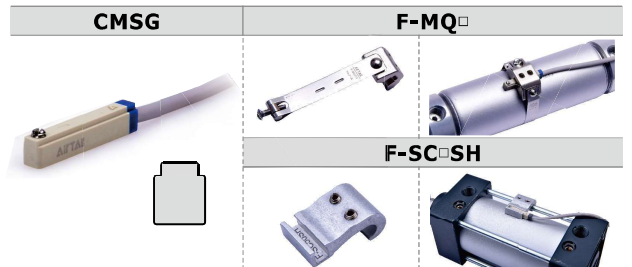

### Four types of cross section

G Type




H Type



E Type



J Type





## Ordering code for EMS



**EMS G - □ 020 - □**



① ② ③ ④ ⑤

① Model	EMS: Solid State Sensor			
② Specifications	G	H		
③ Output type	Blank: 2 wire			
④ Lead wire	Direct lead wire	020: 2m	030: 3m	050: 5m 100: 10m
	Plug connector [Noet1]	M08:0.5m with M8 plug connector M08010:1m with M8 plug connector M08020:2m with M8 plug connector M08030:3m with M8 plug connector	M12:0.5m with M12 plug connector M12010:1m with M12 plug connector M12020:2m with M12 plug connector M12030:3m with M12 plug connector	
⑤ Additional specification	Blank: General type	RW:Waterproof, oil and flexure-resistant type IP68		

[Note1] Waterproof, oil and flexure-resistant type is not available for all series M08, M12 plug connector.  
Add:The sockets of M08 and M12 need additional order. Please check on page 537.

## EMS Specifications

Item	EMS
Model	2-wire
Power supply voltage	10V ~ 28V DC
Switching current	2.5mA ~ 100mA
Contact capacity	2.8W Max.
Current consumption	3mA Max.
Internal voltage drop	3.5V Max.
Leakage current	0.06mA Max.
Switching frequency	1000Hz
Impact resistance	30G
Circuit protection	Reverse polarity protection Surge protection
Operating Temp.	-10°C ~ 70°C
Enclosure	General type : IP64 / Waterproof, oil and flexure-resistant type IP68
Standard	CE marking, RoHS
Note	Temperature overheat protection





## Compendium of EMS Series

### Two type of sensors

#### General type(EMS)

General type(Aqua Blue)




#### Waterproof, oil and flexure-resistant type(EMS-RW)

Product characteristics:

1. Flexure resistant curve material can be used in manipulator industry, such as multi joint manipulator and tank chain.
2. In case of high temperature, much dust, or water droplets and oil dust, the sensor shall take corresponding dust-proof measures.

#### High deflection wire

The deflection is increased by about 20% compared with the general type

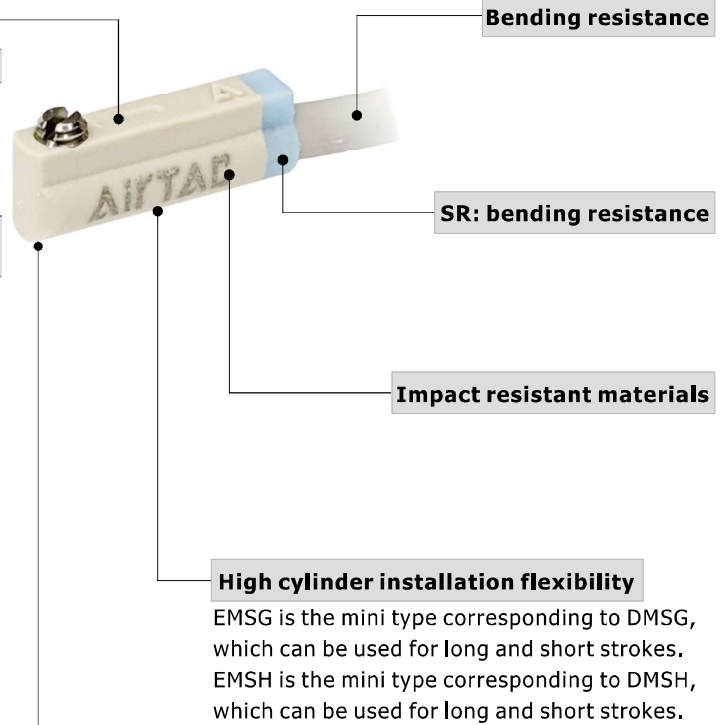

### Two types of cross section

#### G Type General type(Aqua Blue)



#### H Type General type(Aqua Blue)



## DMS, CMS, EMS Series

### Ordering code for Cylinder accessory



**F - MQ** □

① ② ③

① <b>Category</b>	F:Accessory								
② <b>Model</b>	MQ:Cylinder Accessory								
③ <b>Cylinder</b>	Aluminum alloy			Aluminum alloy (Thick type)			Stainless steel		
	Code	For series	For bore size	Code	For series	For bore size	Code	For series	For bore size
	A20: Φ20mm	MCK	Φ20	A32T: Φ32mm	TWG	Φ32	S06: Φ6mm	PB/PBR MI MF MG MA/MAC	Φ6
	A25: Φ25mm		Φ25	A40T: Φ40mm		Φ40	S08: Φ8mm		Φ8
	A32: Φ32mm		Φ32	A50T: Φ50mm		Φ50	S10: Φ10mm		Φ10
	A40: Φ40mm	MBL	Φ40			S12: Φ12mm	Φ12		
	A50: Φ50mm		Φ50			S16: Φ16mm	Φ16		
	A63: Φ63mm		Φ63			S20: Φ20mm	Φ20		
	A80: Φ80mm		Φ80			S25: Φ25mm	Φ25		
						S32: Φ32mm	Φ32		
					S40: Φ40mm	Φ40			
					S50: Φ50mm	Φ50			
					S63: Φ63mm	Φ63			

### Ordering code for NPB series Cylinder accessory



**F - MQN S5/16**

① ② ③

① <b>Category</b>	F:Accessory
② <b>Model</b>	MQN:NPB Series Cylinder Accessory
③ <b>Bore size</b>	S5/16: Φ5/16 inch
	S7/16: Φ7/16 inch
	S9/16: Φ9/16 inch
	S3/4: Φ3/4 inch
	S7/8: Φ7/8 inch
	S1-1/16: Φ1-1/16 inch
	S1-1/4: Φ1-1/4 inch
	S1-1/2: Φ1-1/2 inch
	S1-3/4: Φ1-3/4 inch
	S2: Φ2 inch
S2-1/2: Φ2-1/2 inch	

### Ordering code for Tie Rod Cylinder accessory



**F - SC** □ **SH**

① ② ③ ④

① <b>Category</b>	F : Accessory		
② <b>Model</b>	SC:Tie Rod Cylinder Accessory		
③ <b>Cylinder</b>	Code	For series	For bore size
	32	SC SGC	Φ32, Φ40
	50		Φ50
	63		Φ63
	80		Φ80, Φ100
	125		Φ125
	160		Φ160, Φ200
250	Φ250		
④ <b>Attached</b>			

## DMS, CMS, EMS Series

### Ordering code for Socket



**F - EC M08 B 020 - □**


① ② ③ ④ ⑤ ⑥

① Category code	F: Accessory			
② Specification code	EC: Connecting Wire			
③ Socket type	M08:M8 socket	M12:M12 socket		
④ Wire type	B: 2-wire type		C:3-wire type	
⑤ Wire length	020: 2 meters	030:3meters	050:5meters	100:10meters
⑥ Additional specification	Blank: General type			


### Connection method

#### 2 wire, reed sensor connection


##### 1.General connection

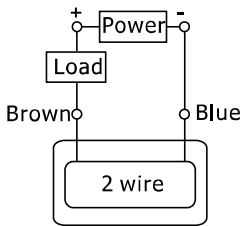

##### 2.Series connection(And)

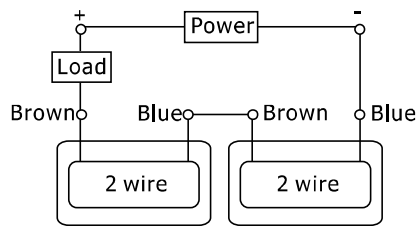


##### 3.Parallel connection(OR)

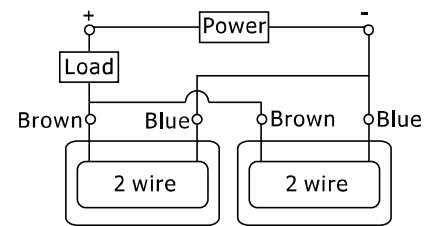


#### 3 wire, solid state NPN connection

Note: The indicator lights will light up when both auto switches are turned NO.


##### 1.General connection

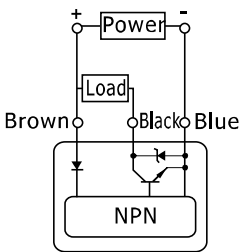

##### 2.Series connection(And)

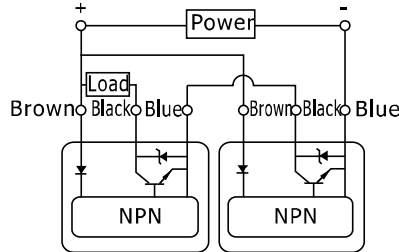


##### 3.Parallel connection(OR)

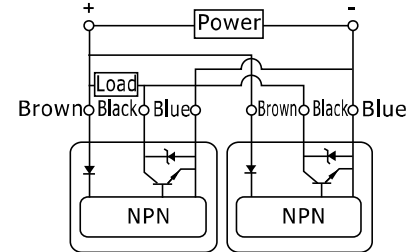


#### 3 wire, solid state PNP connection

Note: The indicator lights will light up when both auto switches are turned NO.


##### 1.General connection

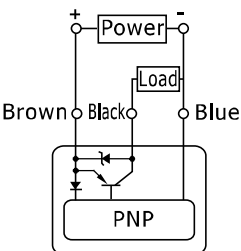

##### 2.Series connection(And)

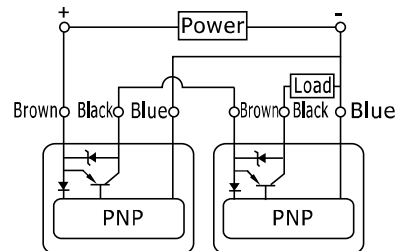

##### 3.Parallel connection(OR)

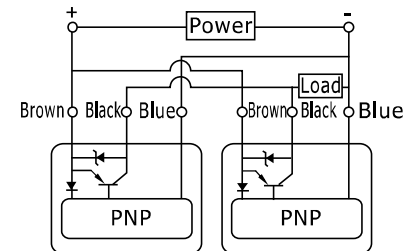


## DMS, CMS, EMS Series

### Dimensions

#### G Type

[Unit: mm]


##### CMSG \ DMSG

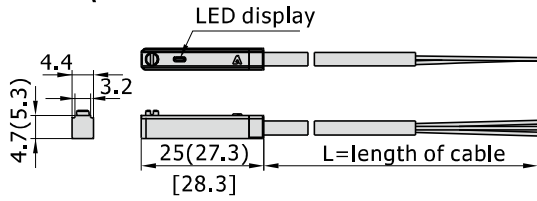

Note: a number in the '( )' is the dimension of CMSG.  
a number in the '[ ]' is the dimension of CMSG(Heat resistant).


#### H Type

##### CMSH \ DMSH

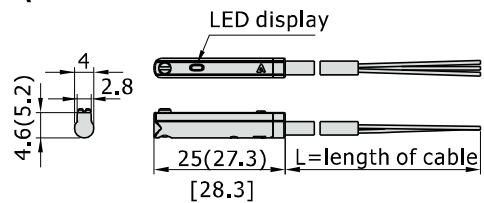


Note: a number in the '( )' is the dimension of CMSH.  
a number in the '[ ]' is the dimension of CMSH(Heat resistant).

##### EMSG

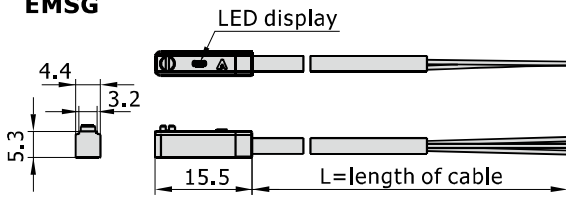


##### EMSH

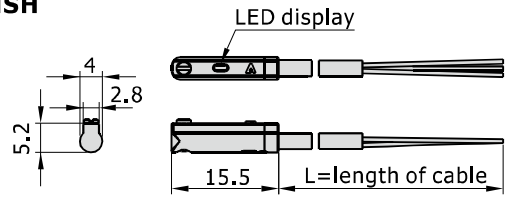


#### J Type

##### CMSJ

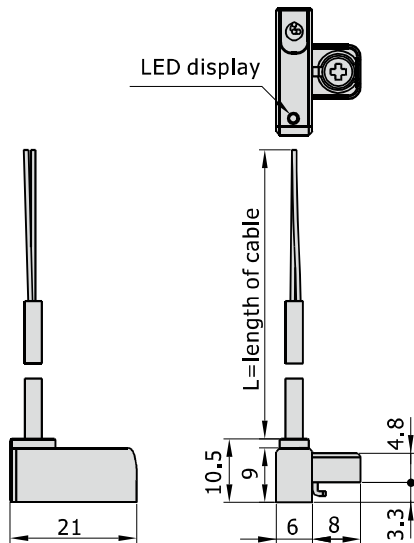


##### DMSJ

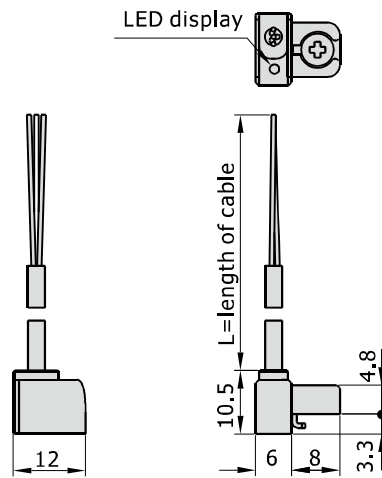

length of cable specification	length of cable(L)
020 Type	2000mm
030 Type	3000mm
050 Type	5000mm


#### E Type

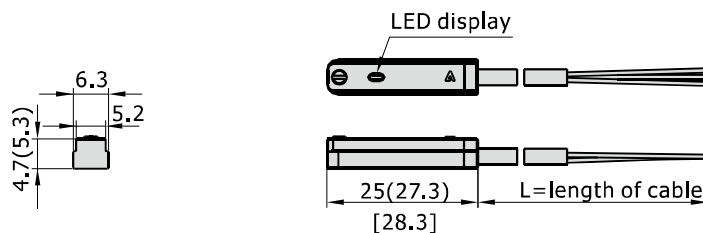


Note: a number in the '( )' is the dimension of CMSE.  
a number in the '[ ]' is the dimension of CMSE(Heat resistant).

## DMS, CMS, EMS Series


**DMSE-RW Type**

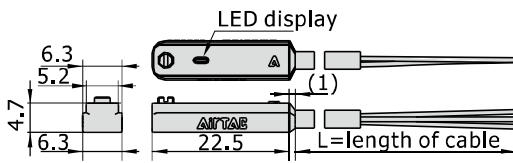


**DMSJ-RW Type**

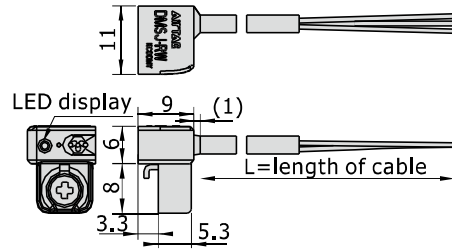


**DMSG-RW Type**

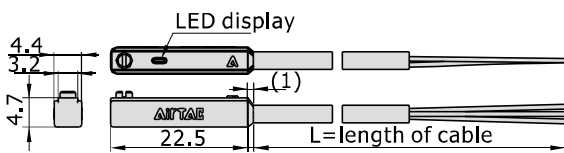


**EMSG-RW Type**

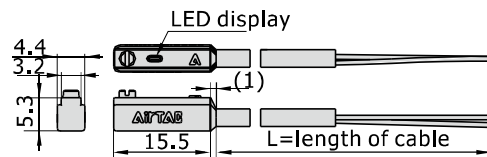

**DMSH-RW Type**

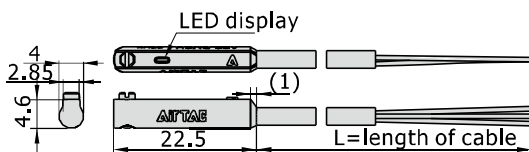




**EMSH-RW Type**

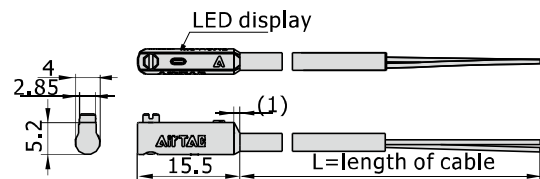




## DMS, CMS, EMS Series

### Socket

#### M8 socket

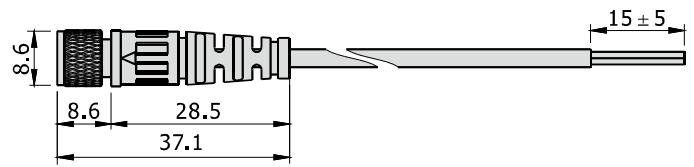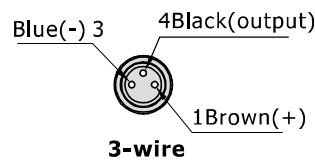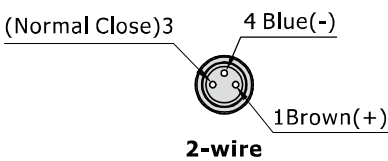

#### M12 socket

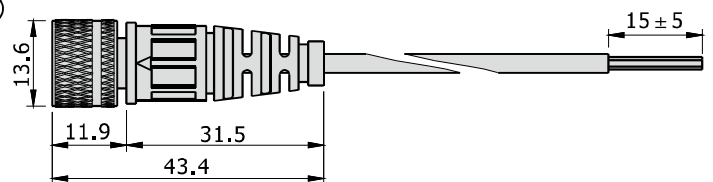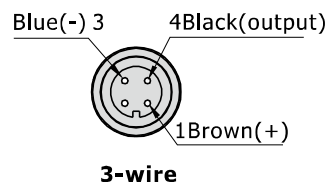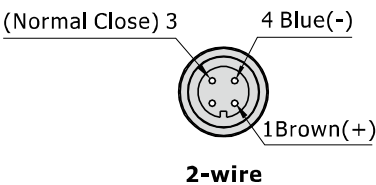


## Instruction

1. Sensor shall not fall down or bear great impact when it is installed.
2. The wire of the Sensor shall not move with the action of cylinder.
3. Clamping torque shall be within the allowable scope when the Sensor is installed(0.15~0.2Nm).
4. Sensor shall be installed in the middle position of the action scope.
5. Sensor wiring:
  - A. The wire is unable to bear repetitive torsion and tension. Please wire an external load before switch the power on.
  - B. No poor insulation in wire.
  - C. Do not wire with power line, high voltage line or use one wiring pipe.
  - D. Pleas wire the circuit correctly base on the circuit diagram.
6. Execute scheduled maintenance by the following guidelines:
  - A. Make sure the sensor is firmly fixed.
  - B. Make sure the wire is intact.
  - C. Make sure that LED indicate the movement of cylinder correctly.
7. Application of environment:
  - A. It is Not allow to use the sensor in the environment with explosive gas.
  - B. Magnetic sensor shall not be used in the environment with external magnetism.
  - C. Magnetic sensor shall not be used in the environment that is always eroded by water.
  - D. Magnetic sensor shall not be used in the environment with oil moisture or chemical substance.
  - E. Magnetic sensor shall not be used in the environment with periodically changing temperature.
  - F. Magnetic sensor shall not be used in the environment with excessively great impact.
  - G. Magnetic sensor shall not be used in the environment with sources of electrical pulse.
  - H. Avoid the environment with accumulated iron power and dense magnetic objects.


## Precautions for wiring

Do not install the wires in the following ways, as it may result in wire breakage accidents.


1. Do not excessively bend or tighten the cables at the tie points.

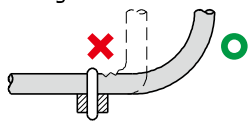


2. Cables should be routed to avoid repeated bending and stretching, as bending stress and tensile force can cause wire breakage. When installing in oscillating conditions, be sure to account for the cable's bending allowance to avoid excessive stretching that could lead to wire breakage.

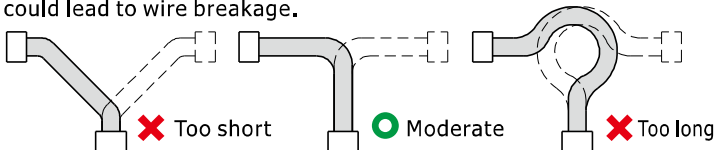

3. When fixing and laying cables (without considering oscillation), the bending radius (R) of the cables should be as large as possible.

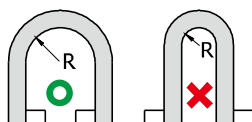


4. Do not bundle multiple cables together (especially cables or pneumatic tubes with different outer diameters) at the bending points.

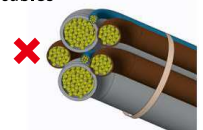

5. Precautions for Cable Carrier Use:

- (1) Bending Radius of the Cable Carrier: The bending radius (R) should be 10 times or greater than the outer diameter of the cable.
- (2) Prevent Twisting of Cables during Wiring: Cables inside the cable carrier should not be twisted. Place the cables horizontally or suspend them to eliminate any twisting.
- (3) Avoid Over-fixing Inside the Cable Carrier: When wiring, ensure that no tension is applied to the cables, and do not fix the cables to movable parts. Secure the cables only at the two fixed ends of the cable carrier.

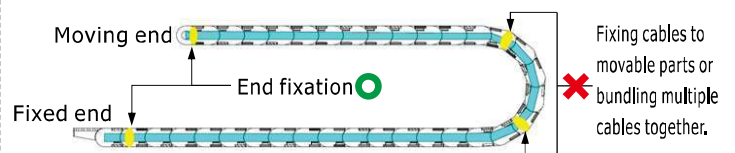

## DMSG, CMSG, EMSG Series

### How to selection

DMSG	CMSG	EMSG	NSU						HFKP					HFKL		
			1-1/2	2	2-1/2	3-1/4	4	5	16	20	25	32	40	16	20	25
			●	●	●	●	●	●	●	●	●	●	●	●	●	●

DMSG	CMSG	EMSG	NPB										
			5/16	7/16	9/16	3/4	7/8	1-1/16	1-1/4	1-1/2	1-3/4	2	2-1/2
			●	●	●	●	●	●	●	●	●	●	●
It needs an accessory to mount a sensor on a cylinder													












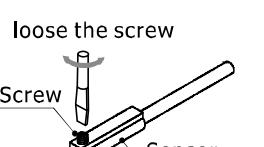
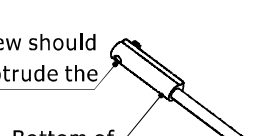
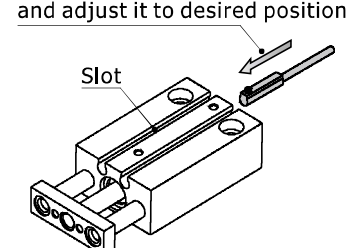
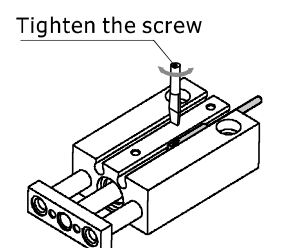
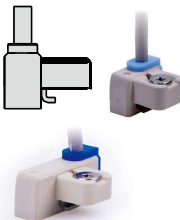
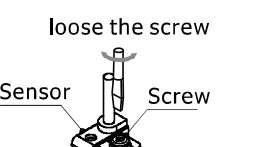
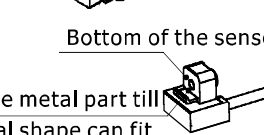
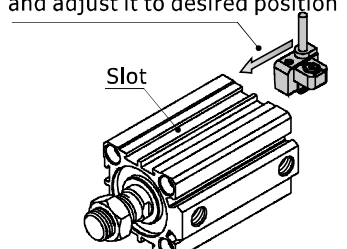
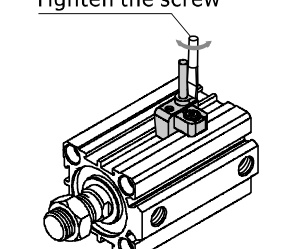
DMSG	CMSG	EMSG	HFK				TCL\TCM								HFZ				HFY																	
			10	16	20	25	32	40	6	10	12	16	20	25	32	40	50	63	80	100	6	10	16	20	25	32	40	6	10	16	20	25	32			
			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●		
			TR				RMT				RMTL				HFP																					
			6	10	16	20	25	32	16	20	25	32	40	10	16	20	25	32	40	10	16	20	25	32												
			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●												

DMSH	CMSH	EMSH	TC		HFZ					HFY	HFP	HFR					HFC					HFT										
			6	10	6	10	16	20	25	32	40	6	32	10	16	20	25	32	16	20	25	32	40	50	63	10	16	20	25	32		
			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
			HLQ\HLQL				HLS\HLSL					HLH																				
			20	25	32	40	6	8	12	16	20	25	6	8	12	16	20	25	6	8	10	12	16	20	6	10	16	20	6	8	10	12
			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
HRQ				HFK					RMH			HRS				Note: HFZ6 can not use CMSH sensors.																
2	3	7	10	20	30	50	70	100	200	10	16	20	25	32	40													10	16	20	25	10
			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●		

DMSH	CMSH	EMSH	NACF										NACQ								
			9/16	3/4	1-1/16	1-1/2	2	2-1/2	3	4	12	16	20	25	32	40	50	63	80	100	
			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
			HFD					HFKP					HFCQ								
			8	12	16	20	25	10	16	20	25	32	40	16	20	25	32	40	50	63	
			●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●		
HFKL				HGS																	
10	16	20	25	6	8	10	12														
			●	●	●	●	●	●													










## DMS, CMS, EMS Series

### How to mounting

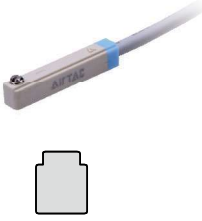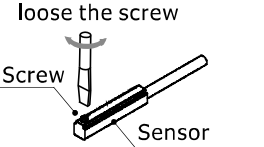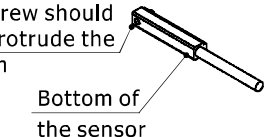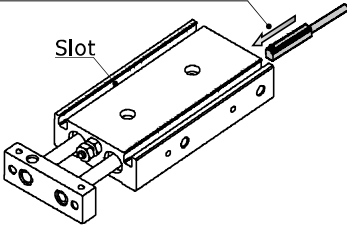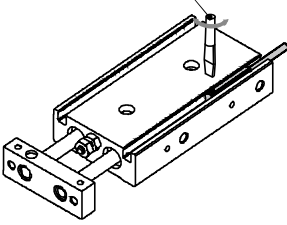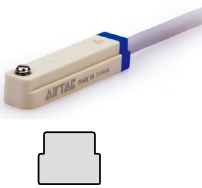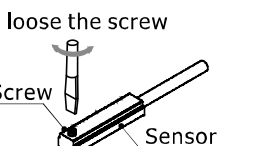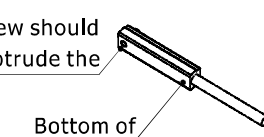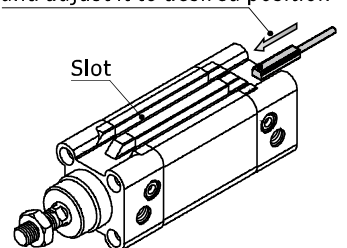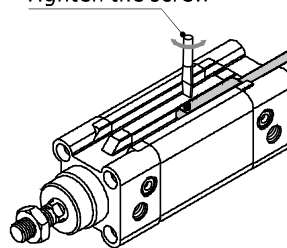Sensor model	Procedure		
<p><b>DMSG/CMSE</b></p> 	<p><b>1</b></p> <p>loose the screw</p>  <p>Screw</p> <p>Sensor</p> <p>The screw should NOT protrude the bottom</p>  <p>Bottom of the sensor</p>	<p><b>2</b></p> <p>Insert the sensor into the slot and adjust it to desired position</p>  <p>Slot</p>	<p><b>3</b></p> <p>Tighten the screw</p> 
<p><b>DMSE/CMSE</b></p> 	<p><b>1</b></p> <p>loose the screw</p>  <p>Screw</p> <p>Sensor</p> <p>The screw should NOT protrude the bottom</p>  <p>Bottom of the sensor</p>	<p><b>2</b></p> <p>Insert the sensor into the slot and adjust it to desired position</p>  <p>Slot</p>	<p><b>3</b></p> <p>Tighten the screw</p> 
<p><b>DMSH/CMSE</b></p> 	<p><b>1</b></p> <p>loose the screw</p>  <p>Screw</p> <p>Sensor</p> <p>The screw should NOT protrude the bottom</p>  <p>Bottom of the sensor</p>	<p><b>2</b></p> <p>Insert the sensor into the slot and adjust it to desired position</p>  <p>Slot</p>	<p><b>3</b></p> <p>Tighten the screw</p> 
<p><b>DMSJ/CMSE</b></p> 	<p><b>1</b></p> <p>loose the screw</p>  <p>Sensor</p> <p>Screw</p> <p>Bottom of the sensor</p> <p>Adjust the metal part till the lateral shape can fit the slot of the cylinder</p> 	<p><b>2</b></p> <p>Insert the sensor into the slot and adjust it to desired position</p>  <p>Slot</p>	<p><b>3</b></p> <p>Tighten the screw</p> 

## DMS, CMS Series

### How to mounting

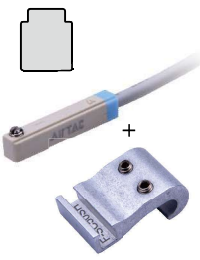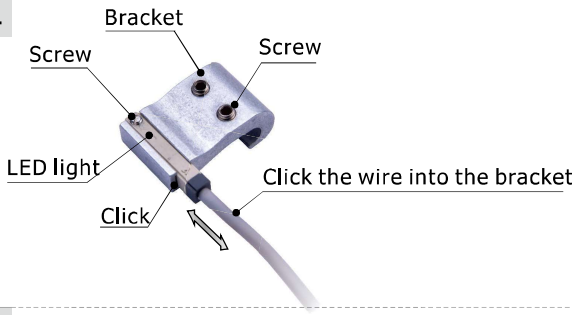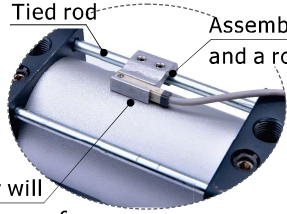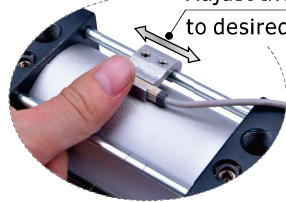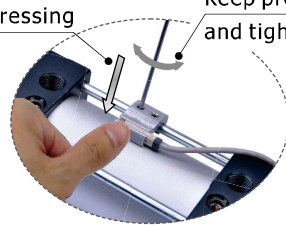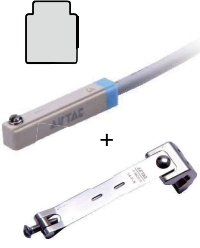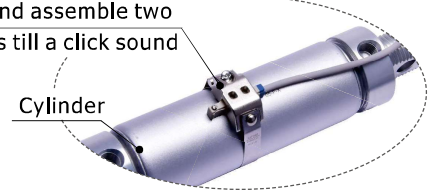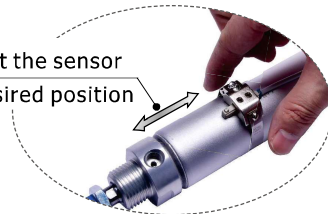Sensor model	Procedure	
<b>DMSG+(F-SC□SH)</b> <b>CMSG+(F-SC□SH)</b>  	<b>1</b>  Bracket Screw LED light Click Click the wire into the bracket	<b>2</b>  Tied rod Assemble the bracket and a rod The sensor will attach to the surface
	<b>3</b>  Adjust the sensor to desired position	<b>4</b>  Pressing Keep pressing the bracket and tighten the screw
	<b>1</b>  Groove for sensor Band Screw (accessory) Screw (sensor) Insert the sensor into the groove	<b>2</b> Tie up the band with a sensor on a cylinder and assemble two plastic parts till a click sound  Cylinder
	<b>3</b>  Adjust the sensor to desired position	<b>4</b>  Tighten the screw